










**DE** Montageanleitung  
**EN** Assembly instruction  
**FR** Notice de montage  
**IT** Istruzioni per l'installazione










Umrüstkit AAA Bremse RB 2051 - M20

Re-equip kit AAA brake RB 2051 - M20

Modification kit AAA frein RB 2051 - M20

Conversione AAA freno RB 2051 - M20

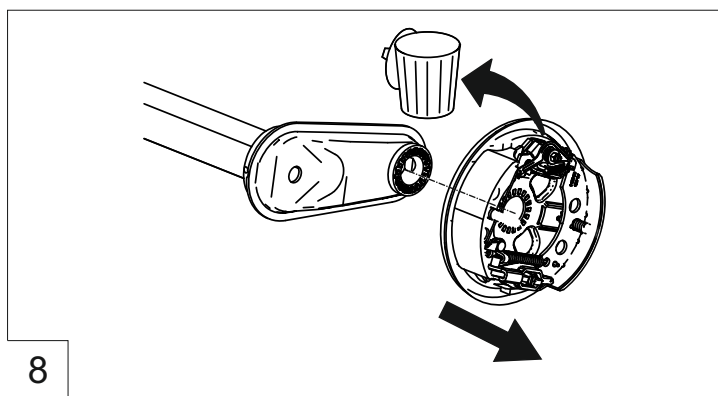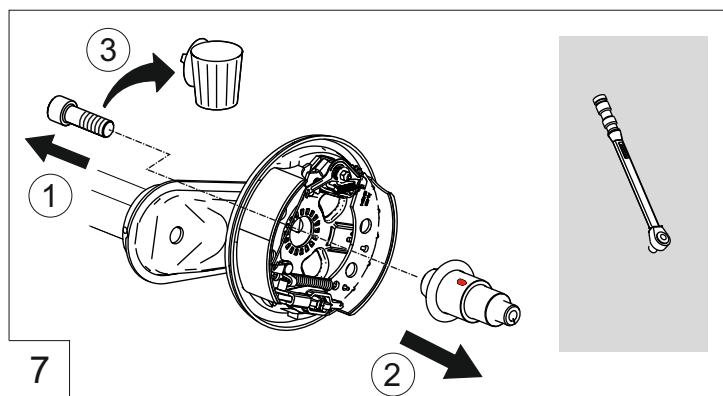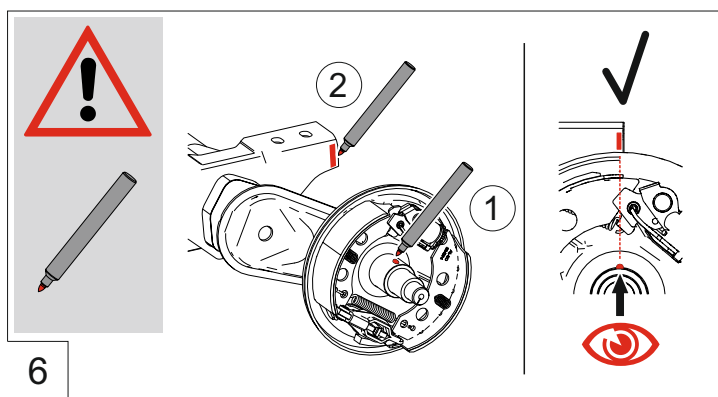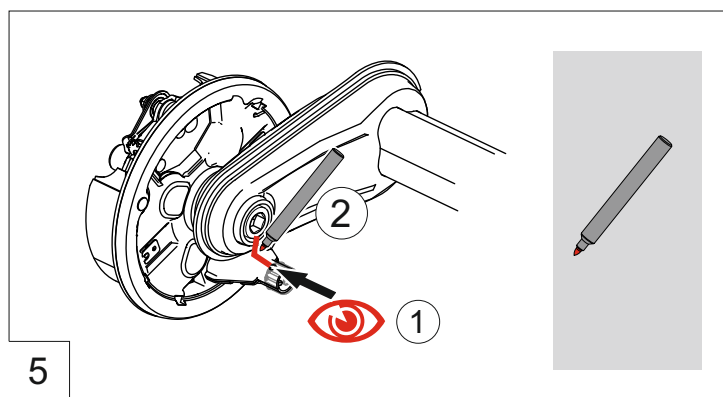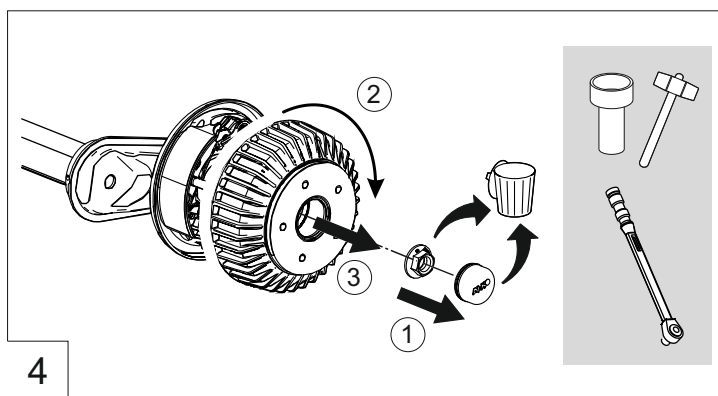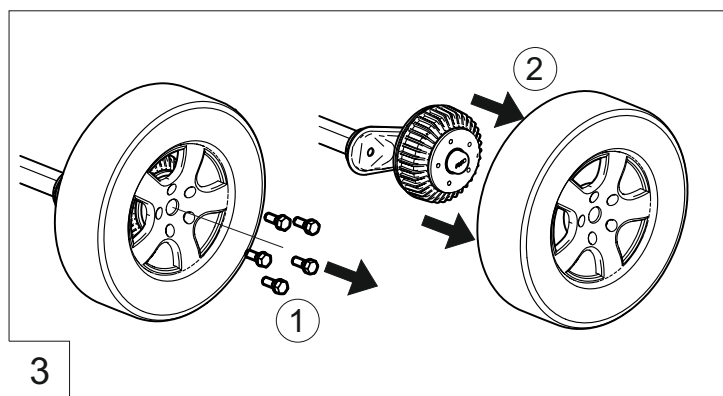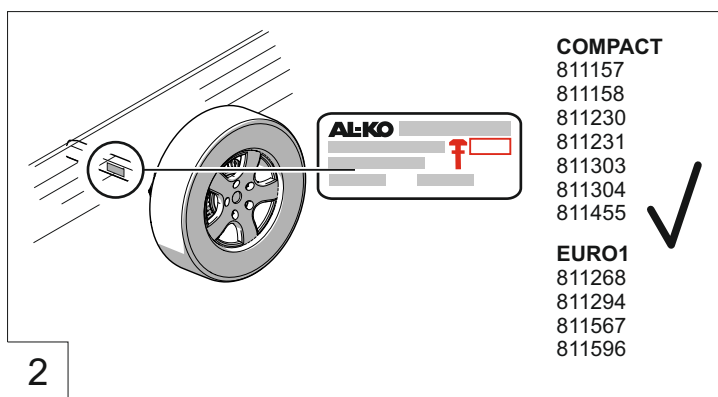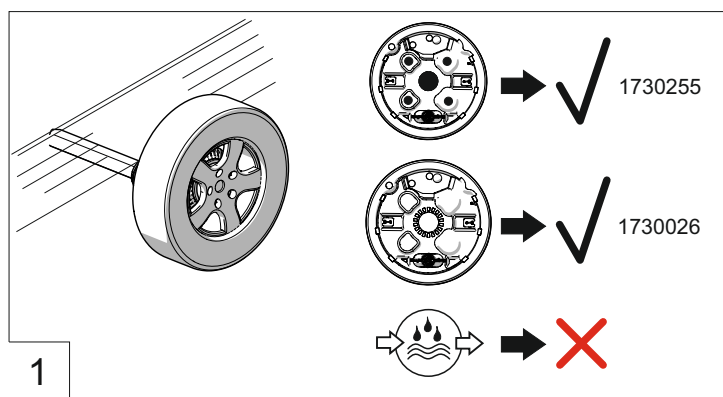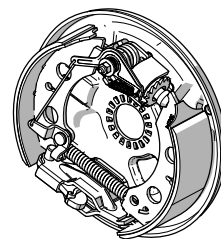

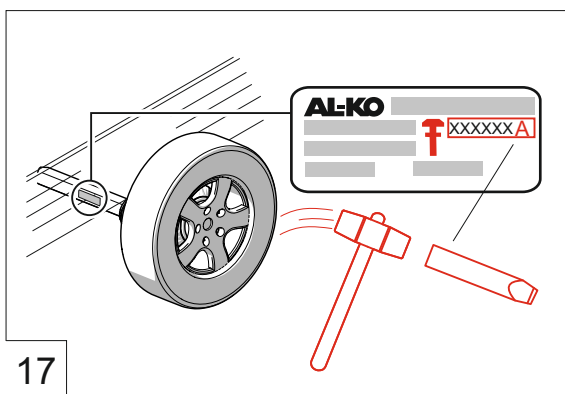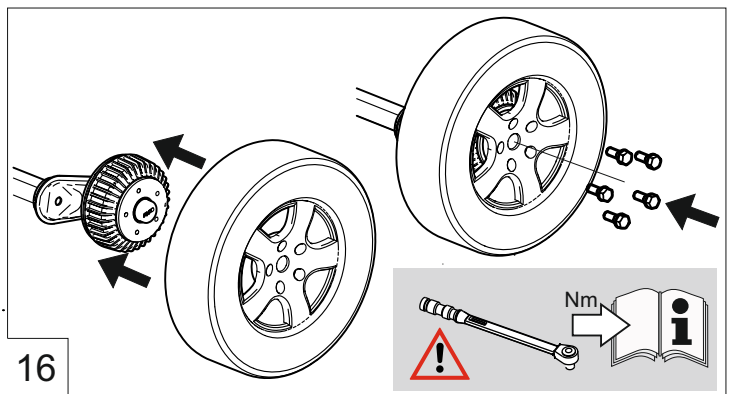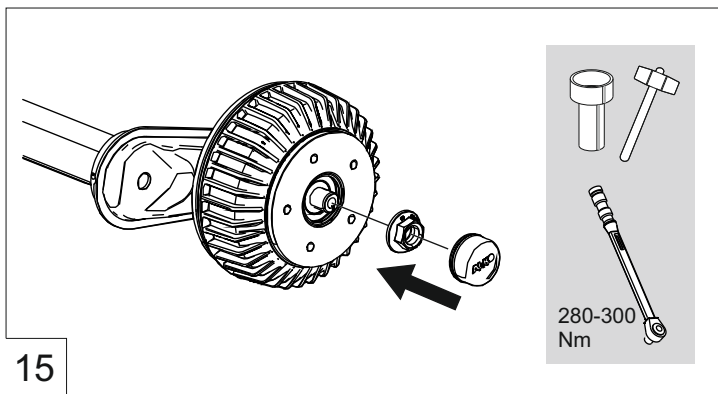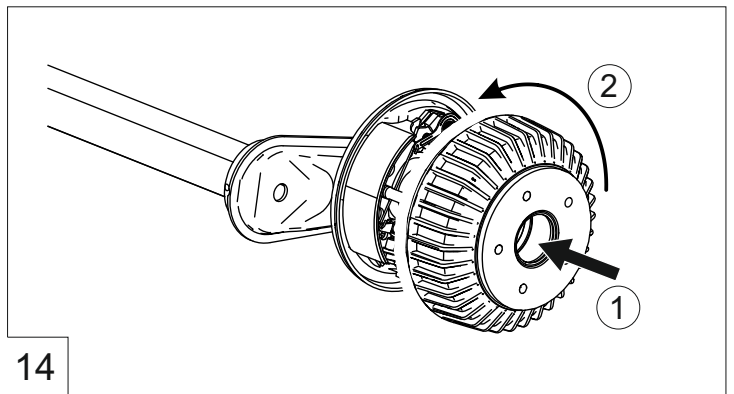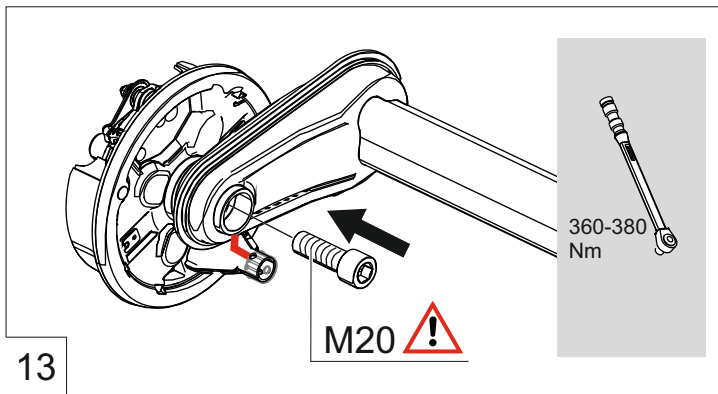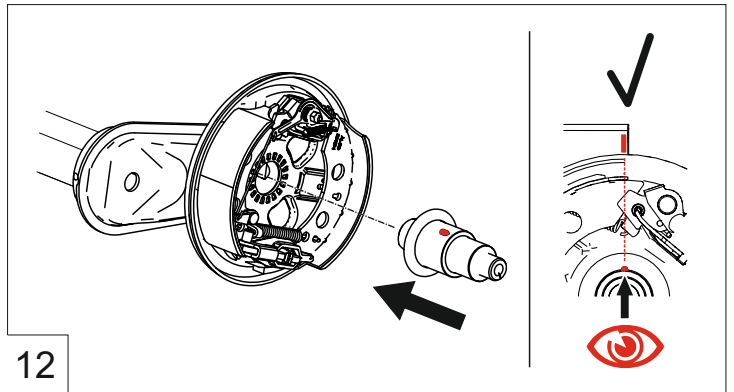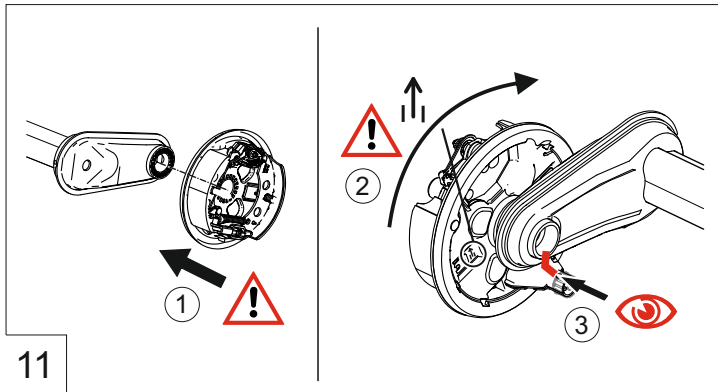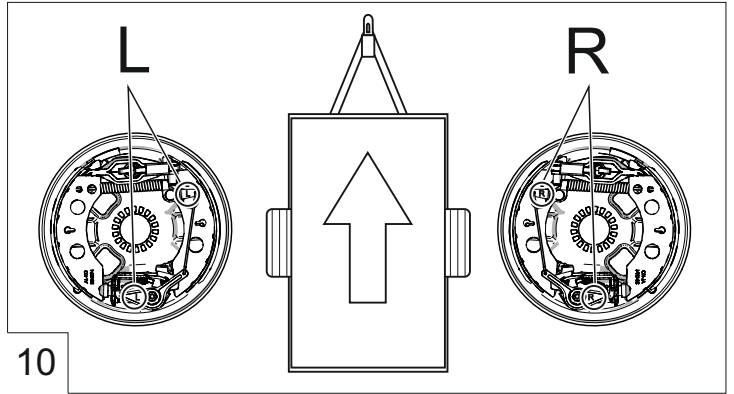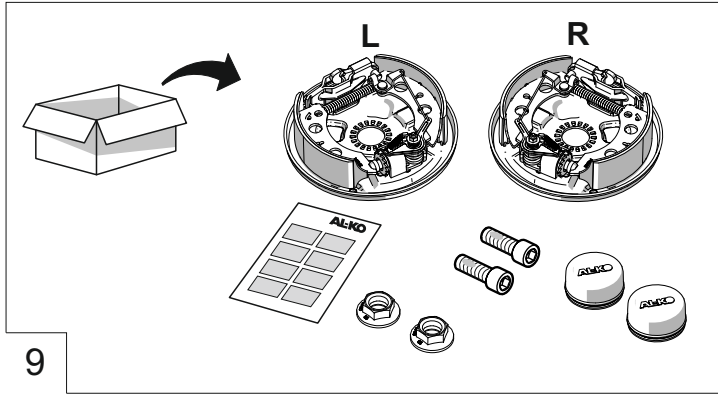

#### Sicherheitsrelevantes Bauteil!

Wir empfehlen den Einbau durch eine Fachwerkstatt.

#### Safety-relevant component!

We recommend installation by a specialist workshop.

#### Composant de sécurité !

Nous recommandons le montage dans un garage expert.

#### Componente di sicurezza importante!

Si consiglia l'installazione presso un'officina specializzata.



#### Einstellung der Bremsanlage vor der Fahrt prüfen!

Check the setting of the brake system before driving!

Vérifiez le réglage du système de frein avant de conduire!

Controllare l'impostazione del sistema frenante prima di guidare!

